


Thank you for showing your confidence in us by purchasing the BEHRINGER SUPER OCTAVER SO400. This is the ultimate octaver with polyphonic input and the capability of creating octaves 1 and 2 octaves below the original tone. Take off with ultra-stable octaver sounds plus an aggressive Drive mode for fat overdrive sounds.

1. CONTROLS

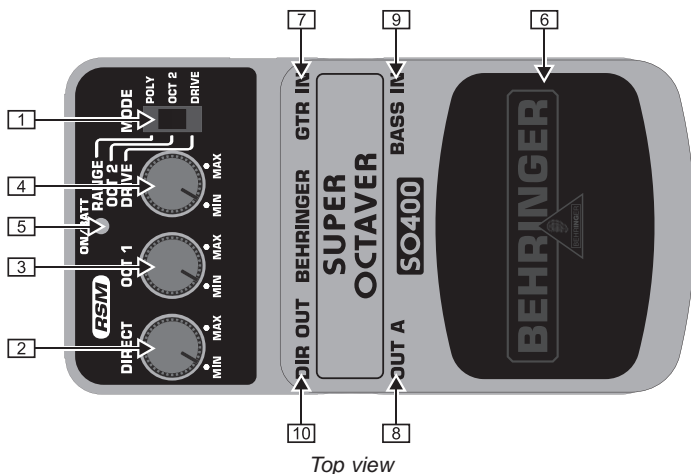

Top view

- 1** The **MODE** switch selects one of the following operation modes:

POLY: Single octave sound which allows to play treble tones without effect over bass tones with octave effect.

OCT 2: Heavy octave sound, adds a second octave to the first one.

DRIVE: Adds an overdrive effect to the original and the octaved signal.
 - 2** The **DIRECT** control adjusts the level of the original input signal (and the DIR OUT connector). In DRIVE mode it adjusts total volume.
 - 3** The **OCT 1** control adjusts the level of the generated signal one octave below the original signal.
 - 4** The function of this knob depends on the position of the MODE switch **1**:

POLY>RANGE: Defines the frequency range in which the input signal triggers the octave effect.

OCT2>OCT 2: Controls the volume of the second octave.

DRIVE>DRIVE: Controls the depth of the overdrive effect.
 - 5** The blue **ON/BATT** LED illuminates when the effect is activated. It also serves as a battery level indicator.
 - 6** Use the footswitch to activate/deactivate the effect.
 - 7** The 1/4" TS connector (**GTR IN**) is optimized for guitars. Use connector **BASS IN** **9** for optimized bass guitar performance.
 - 8** The 1/4" TS connector (**OUT A**) connects to your amp.
 - 9** The 1/4" TS connector (**BASS IN**) is optimized for bass guitars. Use connector **GTR IN** **7** for optimized guitar performance.
 - 10** The 1/4" TS connector (**DIR OUT**) passes the unaffected input signal through, as long as the effect is inactive. Thus **OUT A** is muted. When the effect is active, the effects signal is sent through **OUT A** while the **DIR OUT** carries the input signal. The volume of the **DIR OUT** signal is depending on the **DIRECT** control's setting. This output configuration is useful when different effects should be added to the input signal and the effect signal, after the octave pedal's output.
- 👉 If the **DIR OUT** connector is not in use, the unaffected input signal and the effect signal are both sent out through **OUT A**, depending on the effect activation.**

Use the **DC IN** connection at the front of the unit to plug in a 9 V power supply (not included). The **BATTERY COMPARTMENT** is located underneath the pedal cover. To install or replace the 9 V battery (not included), press the hinges with a ballpoint pen and remove the pedal cover. Be careful not to scratch the unit.

- ☞ The SO400 has no On/Off switch. It is operable as soon as you insert a plug into one of the IN connectors. Disconnect the plug, if you don't use the SO400. In doing so, you can extend the life time of the battery.

The SERIAL NUMBER is located at the underside.

- ☞ In rare cases interferences of the normal function may appear by external influence (e.g. electrostatic discharge), as for example sound disturbances or malfunctions. If this occurs, please turn down the volume on subsequent amplifiers and disconnect the input connector briefly to restart the application.

2. WARRANTY

For our current warranty terms, please refer to our website at <http://www.behringer.com>.

3. SPECIFICATIONS

GTR IN / BASS IN	Connector	1/4" TS
	Impedance	500 kΩ
DIR OUT / OUT A	Connector	1/4" TS
	Impedance	1 kΩ
Power supply BEHRINGER PSU-SB		9 V $\overline{=}$, 100 mA regulated
	USA/Canada	120 V \sim , 60 Hz
	China/Korea	220 V \sim , 50 Hz
	Europe/U.K./Australia	230 V \sim , 50 Hz
	Japan	100 V \sim , 50 - 60 Hz
	Export model	120/230 V \sim , 50 - 60 Hz
Power connector		2 mm DC jack, negative center
Battery		9 V type 6LR61
Power consumption		60 mA
Dimensions (H x W x D)		approx. 54 mm (2 1/8") x 70 mm (2 3/4") x 123 mm (4 4/5")
Weight		approx. 0.33 kg (0.73 lbs)

BEHRINGER is constantly striving to maintain the highest professional standards. As a result of these efforts, modifications may be made from time to time to existing products without prior notice. Specifications and appearance may therefore differ from those listed or shown.

4. SAFETY INSTRUCTIONS

Do not use near water, or install near heat sources. Use only authorized attachments/accessories. Do not service product yourself. Contact our qualified servicing personnel for servicing or repairs, **especially when power supply cord or plug is damaged.**

No utilizar cerca de agua o instalar cerca de fuentes de calor. Utilice sólo accesorios y aditamentos autorizados. No intenté reparar el producto usted mismo. Contacte a nuestro personal técnico cualificado para servicio y reparaciones, **especialmente cuando la fuente o el cable de alimentación estén dañados.**

Не эксплуатировать прибор вблизи от источников воды и тепла. Применять только авторизованные дополнительные устройства. Никогда не ремонтируйте прибор самостоятельно. Ремонт может производить только квалифицированный специализированный персонал, **особенно при повреждениях сетевого провода или сетевой вилки.**

水分の近くや、ヒーターなど熱気のある場所では使用しないでください。正式に認可された付属品のみを使用してください。製品はご自分では決して修理せず、特に電源コードもしくはプラグが損傷した場合には、必ず製品サービスおよびリペアの資格を有した当社の担当員にご相談ください。

不要在靠近水源的地方使用，或在靠近热源的地方安装。只使用经过许可的附件 / 配件。不要自己进行产品维修，**尤其是当电源线或插座损坏的时候**，请联系我们的专业服务人员有关产品维修事宜。

Die deutsche Anleitung ist erhältlich @ www.behringer.com
 Manuel francophone en téléchargement sur www.behringer.com
 Manual en español disponible en www.behringer.com
 Manuali italiani disponibili @ www.behringer.com
 Русскоязычное руководство @ www.behringer.com
 Polska instrukcja dostępna jest pod adresem @ www.behringer.com
 Nederlandse handleiding beschikbaar @ www.behringer.com
 Suomenkielinen käyttöohje saatavilla osoitteesta www.behringer.com
 Svensk manual finns tillgänglig på www.behringer.com
 Dansk vejledning findes på @ www.behringer.com
 Manual português disponível @ www.behringer.com
 Ελληνικό εγχειρίδιο υπάρχει διαθέσιμο στη διεύθυνση www.behringer.com
 日本語版マニュアル @ www.behringer.com
 使用说明书可在 www.behringer.com 下载

Technical specifications and appearance are subject to change without notice. The information contained herein is correct at the time of printing. BEHRINGER accepts no liability for any loss which may be suffered by any person who relies either wholly or in part upon any description, photograph or statement contained herein. Colors and specifications may vary slightly from product. Products are sold through our authorized dealers only. Distributors and dealers are not agents of BEHRINGER and have absolutely no authority to bind BEHRINGER by any express or implied undertaking or representation. No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording of any kind, for any purpose, without the express written permission of BEHRINGER International GmbH. ALL RIGHTS RESERVED. © 2007 BEHRINGER International GmbH. BEHRINGER International GmbH, Hanns-Martin-Schleyer-Str. 36-38, 47877 Willich-Muenchheide II, Germany. Tel. +49 2154 9206 0, Fax +49 2154 9206 4903