



ISO 9001 Certified

DNH^{AS}

**N-3770 Kragerø
NORWAY**

Phone: (47) 35 98 56 00
Fax: (47) 35 98 56 10
E-mail: dnh@dnh.no
Web-site: www.dnh.no

DNH WW Ltd. Phone: (44) 1908 275 000
England Fax: (44) 1908 275 100
E-mail: dnh@dnh.co.uk


DNH Phone: (33) 1 5380 0276
France Fax: (33) 1 4588 1594
E-mail: etienne@dnh.no

DNH GmbH Phone: (49) 040 6569 30 -0
Germany Fax: (49) 040 6569 30 -30
E-mail: dnh@dnh.de

DNH Phone: (1) 484 494 5790
Speakers Inc. Fax: (1) 484 494 5793
USA E-mail: dnh@dnhspeakers.com

MH-50(T)

All outside nuts and screws in stainless steel.

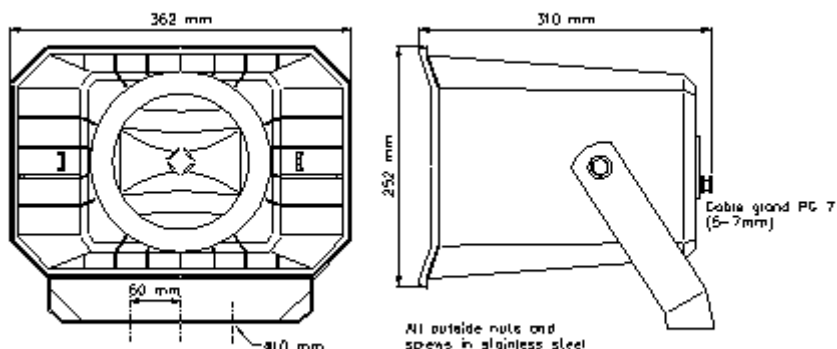


Transformer:
100 Volt line
(optional 70V, 50V)

Primary nominal tapings:

1 : 2	50,0 W
2 : 3	25,0 W
3 : 4	12,5 W
1 : 3	9,0 W
2 : 4	4,5 W
1 : 4	3,5 W
1 : 5	8Ω

1 = Red, 2 = Yellow
3 = Green, 4 = Blue
5 = Black

Sound pressure levels at different frequencies at 1W/1m 1/3 octave pink noise

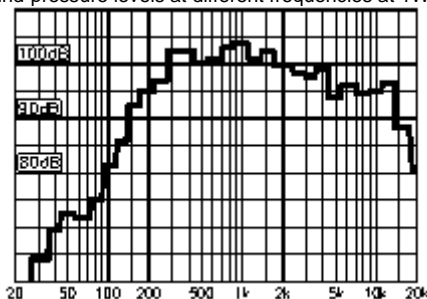

Material/Colour	ABS, Polypropylene / RAL 7035
Mounting	Aluminium bracket
Termination	Screw terminals in termination chamber
Weight	4.5 kg
IP-rating	55
Max. / min. amb. temp	90°C / -40°C
Rated / max. power	50W / 80 W
SPL 1W/1m	104 db
SPL rated power	121 db
Effective freq. range	140- 16000 Hz
Dispersion (-6dB) 1kHz / 4kHz	65° / 20°
Options	Impedance, color, label

Installation, Operation and Maintenance Procedures

- I When mounting the loudspeaker please ensure that it is re-assembled in the same manner in which it was received. Fasten bracket with 2-3 screws.
- I To change the position of the loudspeaker adjust the bracket (by loosening / tightening the screws) as required.
- I For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- I Do not open loudspeaker when energized.
- I Fasten termination chamber lid with a torque of 1-2 Nm.
- I This loudspeaker is supplied with a 2 year warranty against defective workmanship.

