DNH AS
N-3770 Kragerø
NORWAY
Phone: .....(47) 35 98 56 00
Fax: .....(47) 35 98 56 10
E-mail: .....dnh@dnh.no
Web-site: ..... **www.dnh.no**

ISO 9001 CERTIFIED

DNH WW Ltd. England
Phone:....(44) 1908 275 000
Fax:.....(44) 1908 275 100
E-mail:.....dnh@dnh.co.uk

DNH GmbH Germany
Phone:.....(49) 040 6569 30-0
Fax:.....(49) 040 6569 30-30
E-mail:.....dnh@dnh.de

DNH France
Phone:.....(33) 1 5380 0276
Fax:.....(33) 1 4588 1594
E-mail:.....etienne@dnh.no

DNH Speakers Inc. USA
Phone:.....(1) 484 494 5790
Fax:.....(1) 484 494 5793
E-mail:...dnh@dnhspeakers.com

CP-66 (T)

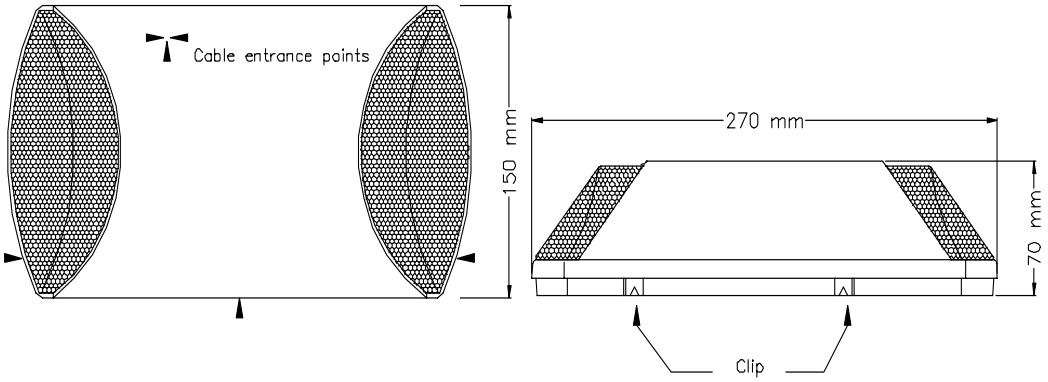

Transformer:
Combined
70/100Volt line

White : Red	100 V
White : Green	70 V

Secondary nominal tappings:

common : 4	6,0 W
common : 3	3,0 W
common : 2	1,5 W
Common : 1	0.5 W

Remove the lid by pressing the two clips on each side of the loudspeaker

Sound pressure levels at different frequencies at 1W/1m pink noise

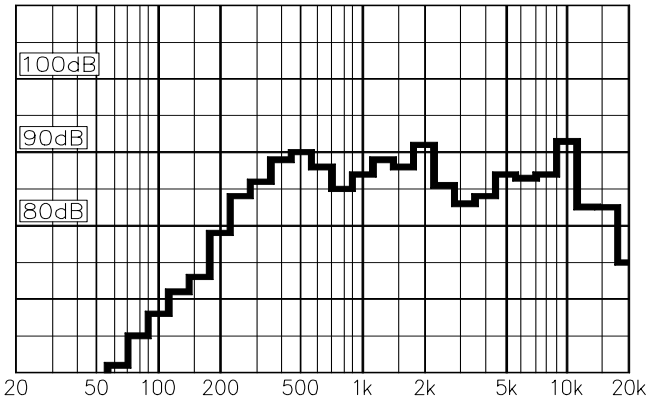

Material / Color	ABS / RAL 9010
Mounting	4 screws
Termination	Internal screw terminals
Weight	0,9 kg
IP-rating	
Max. / min. amb. temp	90 °C / -20 °C
Rated / max. power	6 W / 10 W
SPL 1W/1m	88 dB
SPL rated power	96 dB
Effective freq. range	180 – 18000 Hz
Dispersion vertical (-6dB) 1kHz / 4kHz	180° / 120°
Directivity factor, Q	
Options	Impedance, color, label

Installation, Operation and Maintenance Procedures

- To open the loudspeaker, press the two clips on each side of the loudspeaker and separate the cabinet from the chassis.
- Enter the cable trough a suitable cable entrance.
- Fasten the chassis to the wall or roof with 4 screws.
- Clip the cabinet on to the chassis after termination.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Do not open loudspeaker when energized.
- This loudspeaker is supplied with a 2 year warranty against defective workmanship.

DNH reserves the right to alter specifications without notice.